

V5.1

BLASTHOME™



INSTALLATION INSTRUCTIONS

FOR:

Adjustable Brackets

Signature Collection


PARTS INCLUDED:

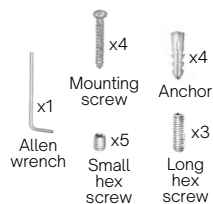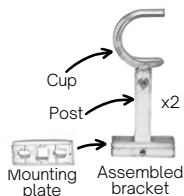

Tools needed:


Level, measuring tape, pencil, drill, 1/4" drill bit, hammer

NOTE: A hex screw can run away, so we've included one extra each!

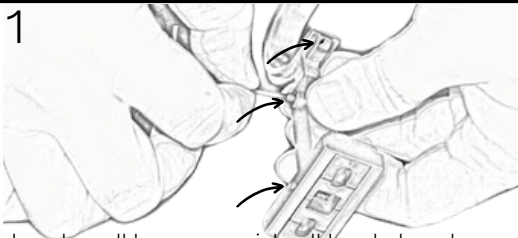

Insert small hex screws into all bracket post locations and on both end caps, but do not tighten yet. Next, slightly insert long hex screw into bracket cup. Then, release mounting plate from bracket posts.


TIP: We recommend holding the allen wrench vertically (as shown in the "parts included" section) and then putting the hex screw on top for easy handling and insertion into bracket.

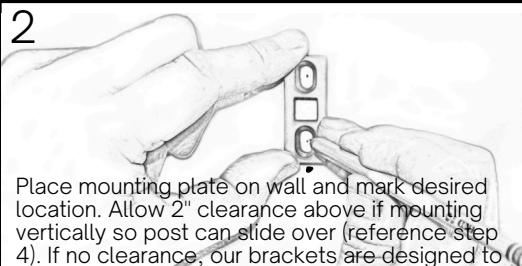

Place mounting plate on wall and mark desired location. Allow 2" clearance above if mounting vertically so post can slide over (reference step 4). If no clearance, our brackets are designed to mount horizontally too. To mount horizontally, remove cup from post and rotate cup upward. Then, repeat marking on other side.



For walls with studs aligned, attach mounting plates by drilling in mounting screws (as shown). Alternatively, for dry wall, pre drill 1/4" holes with drill bit. Then, simply tap anchors into place with hammer and drill in mounting screws.

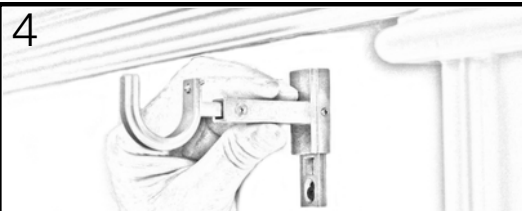


Slide bracket posts over mounting plates and insert bracket cups. Tighten small hex screws into posts at desired length. At this point, add rod to check level. Slight adjustments can be made by pushing mounting plates up or down if needed.



FUN FACT: Our strong brackets have tested to hold 15lb each!



Add curtains to rod. Then, attach end caps to both ends of rod and tighten small hex screws on each end cap. Lastly, lift rod onto brackets.

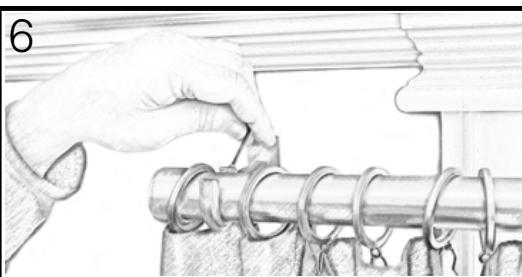

Tighten long cup hex screws to secure rod in place. Enjoy your beautiful new window from your friends at BlastHome :)