
HOW TO BUY: BLASTHOME NONADJUSTABLE RODS -- MEASURING IS ESSENTIAL BEFORE BUYING --

STEP 1:

Measure window width from inside of frame.

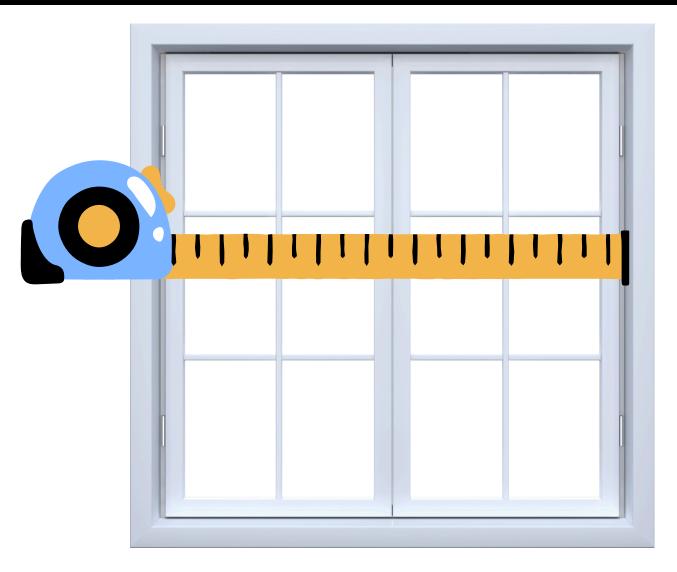

STEP 2:

Match with suggested rod set size.

WINDOW WIDTH	SUGGESTED ROD SET SIZE		
18-24"	3 foot		
24-30"	3 1/2 foot		
30-36"	4 foot		
36-42"	4 1/2 foot		
42-48"	5 foot		
48-60"	6 foot		
60-72"	7 foot		
72-84"	8 foot		
84-96"	9 foot		
96-108"	10 foot		
108-120"	11 foot		
120-132"	12 foot		


EXTENDED SIZES (CONNECT MULTIPLE ROD SETS)		
132-144"	4 foot + 9 foot	
144-156"	7 foot + 7 foot	
156-168"	7 foot + 8 foot	
168-180"	8 foot + 8 foot	
180-192"	8 foot + 9 foot	
192-204"	9 foot + 9 foot	
204-216"	7 foot + 12 foot	
216-228"	8 foot + 12 foot	
228-240"	9 foot + 12 foot	
240-252"	11 foot + 11 foot	

Overhang is calculated into all suggested rod set sizes.

Rod sets 5' and over are 2 or more pieces that join with a connecting screw (see parts included).

STEP 3:

Double check that your selected size fits your space by extending measuring tape to size and holding to window as shown.

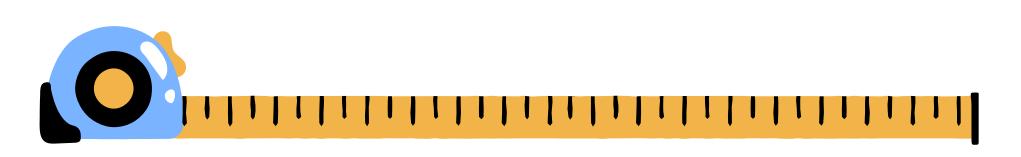

Overhang	Overhang

Our rods are <u>nonadjustable</u> so this will be the actual size of your rod.

If you're still unsure of which size to order, see our measuring video for more information.





By taking the time to measure correctly, you're doing your part in helping to reduce our carbon footprint by reducing returns. The environment and your friends at BlastHome thank you for it!!